



9 M

PRODUCT DESCRIPTION SHEET

GB

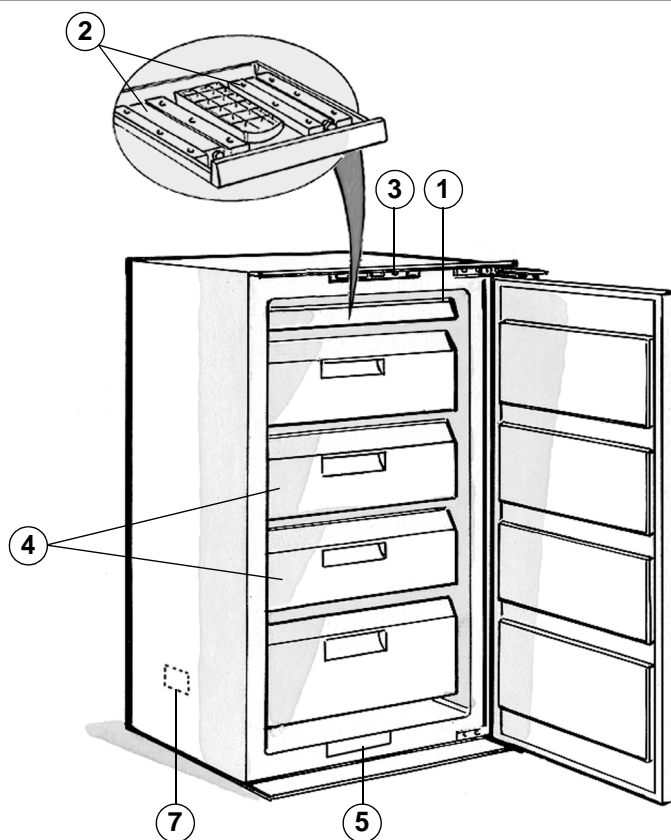

1. Tray (for ice packs and ice cube trays)
2. Ice packs
3. Control unit
4. Area for drawers and pull out baskets
5. Pull-out defrost water drain
6. Thermometer
7. Data plate (inside the appliance)

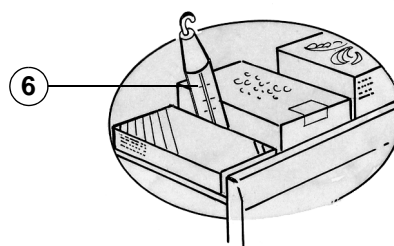


Note: The design of drawers and accessories may vary, depending on the model.

D GB F NL E P I GR S N DK FIN

9 M

Controls

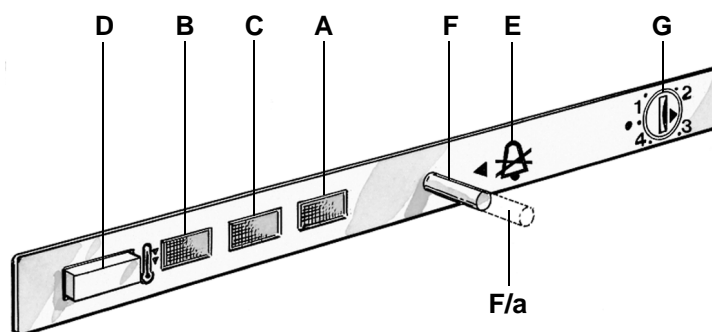

CONTROL UNIT:

- A. GREEN LED: indicates that the appliance is on.
- B. YELLOW LED: indicates that the fast freeze function is in operation.
- C. RED LED: indicates that the freezer temperature is too high (see "Troubleshooting Guide").
- D. Switch for selection of fast freeze function.
- E. Acoustic alarm (if supplied): sounds when the freezer compartment temperature is too high.
- F. Door contact switch (if supplied).
- F/a. Door contact switch for deselection of acoustic alarm (if supplied).
- G. Thermostat.

Important:

To set a colder temperature, turn the thermostat clockwise (towards the right).
To switch the freezer off, turn the thermostat anticlockwise (towards the left).

Thermostat set to ●: freezer switched off

Thermostat set to 1: **least cold** internal temperature

Thermostat set to 2/3: **intermediate** internal temperature

Thermostat set to 4: **coldest** internal temperature

The average recommended thermostat setting is 2/3.

Note: the yellow led **must light up only** during fast freezing.

To freeze the **maximum amount** of food possible, select the fast freeze function **24 h** before placing food in the freezer and to **deselect the function** 24 h after placing the food.

Printed in Italy 10/00

5019 100 40057

(D) (GB) (F) (NL) (E) (P) (I) (GR) (S) (N) (DK) (FIN)